Installation Instructions for CAN-BUS Interface



Locate ECU (Engine Control Unit)

The CANO2BUS is designed for connection at the ECU which is typically located in the engine compartment.



Connect the CANO2BUS

Following the chart below, connect the wires on the CANO2BUS, in the order shown, to the appropriate wires in the vehicle. Connect the analog speed signal output wire to the

input of your aftermarket component.

Connection Order	Wire Color	Function
1	Black	Ground
2	Yellow	CAN Bus High Input
3	Blue	CAN Bus Low Input
4	Orange	Analog Speed Signal Output
5	Red	+12 Volt Switched (Accessory)

If you experience any problems, call SoundGate Technical Support at 307-674-4707 or e-mail us at sgtech@soundgate.com