

Features...

The AUXMSTRV3 utilizes sophisticated microprocessor control, high-quality components, and advanced software design to flawlessly adapt the auxiliary input function to each vehicle or aftermarket radio operating system.

Compatible Radios, systems, interfaces:

- All Alpine "M-Bus" type radios.
- Any system using an Alpine CD Changer Interface (example: Blitzsafe, PAC, PIE, Peripheral, etc.).
- 1996-97 Jaguars

Preliminary:

- Turn the ignition key of the car to the "Off" position.
- Make sure the car's factory radio is turned to the "Off" position.

Step 1 Gain access to the interfacing location for your AUXMSTRV3.

- You will be connecting the SoundGate AUXMSTRV3 at the rear of the radio, or at the factory changer cable location.

Consult a factory service manual for exact disassembly instructions if you are unsure of the procedure. Pay close attention to any warnings regarding working in or around air bags. Gain access to this location.

Step 2 Mount the AUXMSTRV3 and connect cables.

- Mount the AUXMSTRV3 at the desired location.
- Securely run the cable supplied with the AUXMSTRV3 from the AUXMSTRV3 to the rear of the radio, or to the existing CD changer cable, if plugging in at that location.
- Plug the auxiliary device(s) into the AUXMSTRV3's RCA cable inputs.

Step 3 Test the operation of AUXMSTRV3.

- Turn the auxiliary device on and place the radio into the "CD Changer" mode. If your auxiliary device is turned on, you should hear the audio from it at this time.
- Replace any panels that you removed for access, and your installation is complete!

Operational Notes for listening to your new Auxiliary device...

IMPORTANT: Driver distraction (paying attention to your driving) is an important issue. We recommend controlling your auxiliary device only when the car is stationary and parked.

- Your auxiliary device is controlled from the device itself.
- Enter 'CD Changer' mode by pressing the radio's 'CD' button, or using the 'Mode' button to switch to CD Changer mode.
- Pushing the "RANDOM" button switches between Aux Input 1 and Aux input 2. To operate, push RANDOM once to switch the audio, **then press RANDOM a second time to lock it to that input.** (Note: On Alpine M-Bus radios, press "Function" to access the "Random" mode.

Note: If your radio does not support this function, alternate switching modes have been included in AUXMSTRV3:

Alternate mode 1 - Press 'REPEAT', **then press REPEAT a second time to lock it to that input**

Alternate mode 2 - Press 'SCAN', **then press SCAN a second time to lock it to that input**

Note: Some radios can access each auxiliary input by simply using direct disc access - this is typically done by simply pressing the "Disc 1" or "Disc 2" buttons.

- When in Aux Input mode, the radio display will show "Disc 1" for auxiliary input #1, and "Disc 2" for auxiliary input 2.
- To exit the Aux mode, simply source to AM/FM, or internal CD.

Note: If you have a radio that will not support switching between the two sources via the radio's buttons, we have included a 2-pin header connection on the circuit board that a single-pole, single-throw switch can be wired to, to provide manual switching control - please contact SoundGate Technical Support at 1-307-674-4707 for details.