


# BECKER AUXILIARY INPUT ADAPTER INSTALLATION

## ENABLING THE AUX ON THE BECKER RADIO

In order for the radio to play the auxiliary device, “AUX” Mode must be enabled from within the radio menu; otherwise the auxiliary device will not play. Follow the instructions below for the applicable radio.

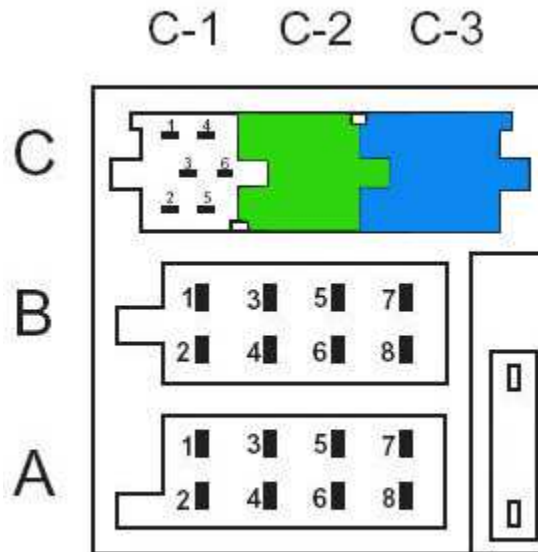

**WARNING:** When installing an auxiliary input adapter to Becker radios, the CD Changer (if present) must be disconnected this includes both the BLUE and GREEN plugs otherwise the “AUX” will not work (no sound).

### BECKER RADIOS WITH "TP" BUTTON (i.e. CR-220)

1. Turn radio "ON"
2. Press and hold the "TP" button for about 8 seconds until **Becker 1** is displayed.
3. Turn the Tuning Knob until **AUX OFF** is displayed.
4. Press either button located directly under the Arrows on the display to change the present setting from OFF to **ON**.
5. Turn radio **OFF**.
6. Turn Radio back "ON" Press "CD" button to enter AUX Mode.

### FERRARI with centered ☼ Button (i.e. BE6104)

1. Turn Radio "ON"
2. Press and hold the ☼ button (center) on the top right for about 8 seconds. Select AUX "ON/OFF" option.
3. Press either button located directly under the Arrows on the display to change the present setting from OFF to **ON**.
4. Turn radio **OFF**.
5. Turn Radio back **ON** press the "☼" button until "AUX" is displayed.

## **PORSCHE NavTraffic Pro RADIOS**

1. Press the "Radio" button to enter Radio mode.
2. Press the "Nav" and "F10" simultaneously
3. Press "Next" until the AUX input, Changer Res screen
4. Press AUX to enable/disable.

## **LANDROVER 4775 (BECKER)**

1. With the Radio "ON" press and hold the Tone button until the sub-menu comes up.
2. Press the soft-key labeled "Aux" until the screen displays "AUX Mode on".
3. Press the Tone button to exit the menu.
4. To enter "AUX" mode, press the "CD" button and select the "AUX" soft-key.

## **MERCEDES BENZ BE4602**

1. Turn radio ON.
2. Press and hold the ☀ button for 8 seconds, until **Becker 1** is displayed.
3. Turn the Tuning Knob until **AUX OFF** is displayed.
4. Press either button located directly under the Arrows on the display to change the present setting from OFF to **ON**.
5. Turn Radio back "ON" Press "CD" button to enter AUX Mode

## **BECKER AFTERMARKET (BE4527)**

1. Turn radio ON.
2. Press and hold Function button #2 (center button on top right) for more than 4 seconds.
3. The accompanying menu appears on the display.
4. Press the multifunction button located directly under "AUX" on the display to change the present setting from OFF to **ON**.
5. The Setting is stored automatically. Press "CD" button to enter AUX Mode

## **BECKER AFTERMARKET (i.e. BE7077) Sound5**

1. Turn radio ON.
2. Press the **dp** (button left of present #1) repeatedly until the EXT menu appear.
3. Turn Rotary control knob clockwise and select EXT AUX.
4. Press the CD button repeatedly until "AUX" is displayed

## **BECKER CASCADE PRO (i.e. 7941, 7944)**

1. Turn radio ON.
2. Press the Ci)
3. Turn the rotary control/push (OK) button counterclockwise until System Settings appears at the top right of the display
4. Press the rotary control/push (OK) button
5. Turn the rotary control /push (OK) button to select External Device
6. Confirm selection by pressing the rotary control/push (OK) button
7. Select "AUX" from list and turn it "ON".
8. Exit menu

### **To listen to the External Device**

1. Press the MEDIA button
2. Turn the rotary control /push (OK) button to "AUX" and press the rotary control/push (OK) button

***With the "AUX" menu option enabled you can now proceed to play your favorite tunes on the Radio. If successful go ahead and re-install the radio.***