


iP-BRK

INSTALLATION INSTRUCTIONS

[Also applicable to iP-BRK(2) (3)]

Portable audio products are everywhere, reflecting demand from active people all over the world to take their music with them. iPods MP3's, portable DVDs compact stereos etc. let you enjoy music at the beach, at a picnic, in the back yard and in the car.

An adapter is required to connect these devices to the car radio and usually requires sacrificing the CD Changer. With the storage capacity of most portable devices sacrificing the CD Changer should be an easy decision.

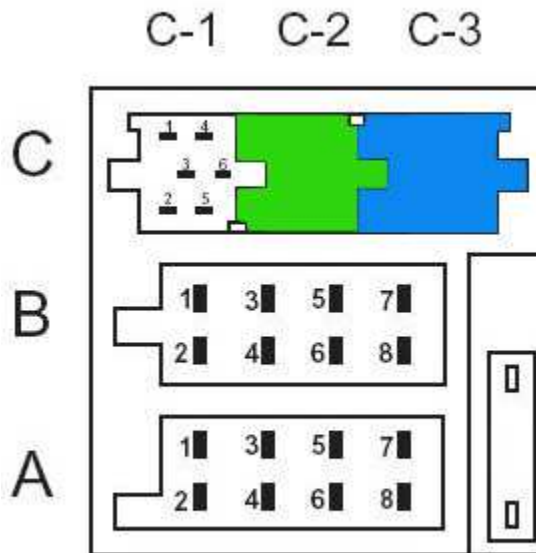

WARNING!! WARNING!!!

Although not critical, we recommend disconnecting the car battery. But before anything locate and record the radio safe code. Most if not all Becker radios are coded. Do not disconnect the battery if you don't have the radio code, otherwise the radio will not operate upon reconnection.

1. Remove radio from the dash (radio may require a special [removal tool](#), not included) See **Fig. 3** below. To remove simply slide the tools into the slots on both sides of the radio until locked (a click is heard), pull radio out. To release keys from radio, push side tabs inward (toward radio).
2. For Vehicles with CD Changer: The changer will be connected to the 20-pin connector (**C3 blue & C2 green**) as seen in the above diagram. Release the plug from the radio by pressing the release tabs. **The CD Changer will no longer function.**
3. Connect the blue and green plug on the adapter to the radio location as seen in the above diagram. **Do not pull the wires. Grasp the plugs to connect or disconnect the adapter.**
4. Carefully route the dock cable from behind the radio to glove box or location where the iPod will reside (within 5 ft)—**See appendix below.**
5. Carefully Re-install the radio by aligning and pushing back into slot. (Tools not required).
6. Enter radio code.

7. Connect your iPod or iPhone to the dock connector. The iPhone will then ask if you want to enter "Airplane Mode" to which you should select "No".
8. You may now select AUX from the Radio menu. See instructions below.
9. Press play on the audio device and enjoy the music. (**See Fig. 6 below**)
10. Use the radio volume control to set playback level and the audio device controls to select your favorite tunes.



Fig. 1
Radio connectors



Fig. 2
Blue plug to radio



Fig. 3
Removal Tools



Fig. 4
iPhone Charging



Fig. 5
iPhone Menu



Fig. 6
iPod/iPhone Controls

ENABLING "AUX"

RADIOS WITH "TP" BUTTON (i.e. CR-220)

1. Turn radio "ON"
2. Press and hold the "TP" button for about 8 seconds until **Becker 1** is displayed.
3. Turn the Tuning Knob until **AUX OFF** is displayed.
4. Press either button located directly under the Arrows on the display to change the present setting from OFF to **ON**.
5. Turn radio **OFF**.
6. Turn Radio back "ON" Press "CD" button to enter AUX Mode.

FERRARI with centered ☀ Button (i.e. BE6104)

1. Turn Radio "ON"
2. Press and hold the ☀ button (center) on the top right for about 8 seconds. Select AUX "ON/OFF" option.
3. Press either button located directly under the Arrows on the display to change the present setting from OFF to **ON**.
4. Turn radio **OFF**.
5. Turn Radio back **ON** press the "☀" button until "AUX" is displayed.

PORSCHE NavTraffic Pro RADIOS

1. Press the "Radio" button to enter Radio mode.
2. Press the "Nav" and "F10" simultaneously
3. Press "Next" until the AUX input, Changer Res screen
4. Press AUX to enable/disable.

LANDROVER 4775 (BECKER)

1. With the Radio "ON" press and hold the Tone button until the sub-menu comes up.
2. Press the soft-key labeled "Aux" until the screen displays "AUX Mode on".
3. Press the Tone button to exit the menu.
4. To enter "AUX" mode, press the "CD" button and select the "AUX" soft-key.

MERCEDES BENZ BE4602

1. Turn radio ON.
2. Press and hold the ☀ button for 8 seconds, until **Becker 1** is displayed.
3. Turn the Tuning Knob until **AUX OFF** is displayed.
4. Press either button located directly under the Arrows on the display to change the present setting from OFF to **ON**.
5. Turn Radio back "ON" Press "CD" button to enter AUX Mode

Use the radio volume control to set playback level and the controls on the audio device to access your music.

APENDIX:

The new [iP-BRK3](#) in addition to the iPod dock includes a set of RCA inputs. These can be used to connect audio devices otherwise not compatible with the dock connector. Devices like Walkman's, DVD Players, Satellite Radio Players, Laptop computers, Zune etc. For a professional finish we recommend the [iS335](#) dash mount kit. This kit converts the RCA's to a 3.5mm jack allowing users to connect devices to a 3.5mm female jack custom mounted on the dashboard.



- iPod Touch (all), iPhone (All) are not compatible with the iP-BRK. Purchase the iP-BRK2 or iP-BRK3 instead.