

# USASPEC PA11-CHR CHRYSLER, DODGE, JEEP iPod™ INTERFACE OWNER'S MANUAL

## 1. ABOUT THE PA11-CHR INTERFACE

The PA11-CHR interface connects the iPod or iPod mini directly to Chrysler audio system. Its on-board software translates commands from either your Chrysler CD Changer controls into commands that the iPod understands. This interface enables the iPod to take place of a Chrysler CD Changer and provides the following benefits:

1. Direct connection of the iPod to Chrysler vehicle audio system for optimum sound quality
2. Control iPod playback with CD Changer buttons on car radio
3. Direct access and control of up to 5 favorite playlist
4. Charge the iPod internal battery — and charging stops automatically at one hour after iPod is paused. iPod will go to SLEEP mode after charging.
5. Auxiliary audio input (connect additional audio devices and listed to them on the factory system)
6. Plug-n-play: includes installation cable, mounting screws and owner's manual.

## COMPATIBILITY

The PA11-CHR interface is compatible with iPod (G3, G4, G5) iPod Mini, Nano, Photo, Video models featuring a dock connector. The functionality and features of the iPod interface described in this owner's manual are confirmed with software version:

<u>iPod</u>	<u>iPod Nano</u>	<u>iPod Photo</u>	<u>iPod Video</u>	<u>iPod Mini</u>
Firmware v2..3	firmware 1.0	Firmware 1.2	firmware 1.0	firmware v1.4
firmware v3.1 (G4)				

Please visit [www.apple.com/iPod](http://www.apple.com/iPod) and update the firmware on your iPod.

Future firmware updates for your iPod, iPod Mini, iPod photo or iPod video may affect the features and functions described in this owner's manual.

*Note: Display of artist and song title information, track search and artist, song title, album or genre is NOT supported. Only the Playlist number and track number are displayed on the radio.*

This interface is designed as an alternate replacement to the Chrysler 6 Disc CD Changer. Therefore it is not possible to have the Chrysler 6 disc CD changer and the PA11-CHR iPod interface simultaneously connected to the Chrysler radio.

## 2. PLAYLIST MODE, DIRECT MODE AND AUX. OPTION

The PA11-CHR provides two ways to control your iPod through the car radio, namely **Playlist Mode** and **Direct Mode**.

**2-1 DIRECT MODE:** Search and select music on the iPod directly just as you would in portable use. Music will playback through your car stereo. Use the track up/down, fast forward and reverse buttons on your radio to control music playback. All control functions on the iPod will still be available. Please see section 4 of this manual for additional information.

**2-2 PLAYLIST MODE:** Operate and control the iPod as if it was a CD Changer. This mode allows you to access up to five playlist on the iPod. This is also referred to as **External Control Mode**. (See Playlist Naming in section 4 of this manual).

Dip switch #2 on the PA11-CHR interface is for mode selection. The "ON" position is for **Playlist Mode** and the "OFF" position is for **Direct Mode**. It is preset to "ON" (**Playlist Mode**) at the factory. When in **Playlist Mode** the iPod is switched to **External Control Mode** and neither the controls on the iPod nor the display are active—the iPod will displays "CHR, OK TO DISCONNECT".

*Note: Disconnect the iPod from the PA11-CHR before switching DIP switch #2 from one mode to the other.*

### 2-3 AUX ADDITIONAL "AUX INPUT OPTION" SELECTION

PA11-CHR interface adapter is also capable of connecting an Auxiliary audio source to your Chrysler radio, including the iPod. The additional audio source connects to the RCA input jack marked "**AUX AUDIO INPUT**". If you choose to use the "**AUX AUDIO INPUT**", DIP switch #1 at the side of the interface box must be set to the "OFF" position (it is preset to "ON" at factory).

The audio source (XM radio, DVD player, MP3 Player, Game system etc.) connected to the "**AUX AUDIO INPUT**" can be accessed at CD 6 Track1 after selecting CD Changer mode on the Chrysler radio. CD 1 to CD4 are for accessing Playlist and CD 5 is for accessing all songs on the iPod.

### 2-4 AUXILIARY INPUT OPERATION

If the "**AUX AUDIO INPUT**" option is selected, the radio will display "CD 6 Track 1" when DISC 6 button is pressed. Use "CD 6 Track 1" to access the audio source connected the "**AUX AUDIO INPUT**" port. Adjust VOLUME, BASS, and TREBLE etc. as you would normally do for the other program sources on the radio.

## 3. CONNECTING & PLAYING THE iPod IN DIRECT MODE

The procedures for connecting and disconnecting the iPod to your PA11-CHR interface adapter are described in this section. Please follow these instructions to avoid connectivity problems or synchronizations errors between the iPod and CHRYSLER radio. When the iPod is connected to the interface, the iPod's screen will go blank for a few seconds before the normal screen returns. Set the source on the radio to CD Changer, the audio from the iPod will be played back at DISC 5 Track1. Adjust VOLUME, BASS, TREBLE etc as you normally do for the other programs sources on the radio.

## 4. CONNECTING & PLAYING THE iPod IN PLAYLIST MODE

### 4-1. Connecting the iPod to the interface.

Turn your CHRYSLER radio ON before connecting your iPod. After connection, the iPod will take a few minutes to change to external control mode. The iPod screen will then show:



You are now able to select iPod mode.

## 4-2 SELECTING iPod MODE ON THE CHRYSLER RADIO

Press the "MODE" or "CD-C" button repeatedly until "CD 1-x" appears on the display (x is the track number for the "Now Playing" song on iPod). This display confirms that iPod mode has been completely synchronized and active. Synchronization timing varies according to the number of playlist on your iPod. If the iPod was playing previous to turning the Radio's ACC power OFF, and the iPod was not disconnected, playback resumes from where it stopped.

## 4-3 DISCONNECTING THE iPod FROM THE INTERFACE

If the iPod is disconnected during playback in iPod mode, the radio will automatically switch to AM/FM mode. After disconnecting, wait until the iPod screen changes from the External Control Mode screen back to the normal menu before attempting to reconnect to the interface.

**Tip:** If you press and hold the PLAY/PAUSE button on the iPod, you may get the normal iPod menu back faster.

## 4-4 PLAYING SONGS ON THE iPod

All audio tracks on your iPod will be played (All Play) at DISC 6 if the AUX option is not selected. Track order is determined by the default order on your iPod. Selecting DISC 1 to DISC 5 on radio will allow playback of 5 playlist on the iPod. Please refer to "Playlist naming" in this manual for more information regarding available and unavailable playlist. Every time the iPod is connected to the interface, playback begins at the "Now Playing" song at DISC 6 by default.

If the iPod was playing any of its playlist right before connection, the same playlist will continue to play and repeated at DISC 6 and the iPod switches to "ALL" when the **FF (▶▶)** button is pressed.

## 4-5 SELECTING A PLAYLIST

Press DISC UP (Λ) or DISC DOWN (V) button to select a playlist. The selected playlist will begin playing and the playlist number and track number will be displayed. In rare cases, this may take up to a few seconds to complete synchronization. After playing the last song in the current playlist, playback will start again from the first track on this playlist.

## 4-6 PLAYLIST NAMING

Once the iPod™ or iPod™ mini is connected to your CHRYSLER radio via the PA11-CHR, the iPod interface scans all available playlist on the iPod and looks for designated "CHR" playlist which are created for direct access with the DISC buttons on the Chrysler radio. The designated "CHR" playlist relate to the DISC number in the following manner:

Preset #'s	Playlist(s) names
DISC1	CHR1
DISC2	CHR2
DISC3	CHR3
DISC4	CHR4
DISC5	CHR5
DISC6	<b>ALL SONGS on iPod</b>

Naming a playlist in iTunes™ for your CHRYSLER iPod interface must be exactly as shown. "CHR" must be in **capital letters** and there can be **no spaces** between "CHR" text and the "DISC" number. However, you may add any text after the correct name and number has been assigned. The following is an example of correct playlist naming with additional text:

DISC1	CHR1_Love
DISC2	CHR2_Discount
DISC3	CHR3_Car
DISC4	CHR4_Stereo
DISC5	CHR5_Service

Note: If no designated "CHR" playlist were created, the PA11-CHR interface automatically relates the first five playlist on the iPod to DISC number 1 to 5 regardless of playlist naming.

If less than five designated "CHR" playlist were created, the PA11-CHR interface automatically fills up the rest of the DISC numbers beginning with the first available playlist on the iPod.

Example: If only three designated "CHR1", "CHR3" and "CHR5" playlists were created, the DISC numbers on the radio would be:

DISC1	CHR1
DISC2	(1 <sup>st</sup> available playlist on the iPod)
DISC3	CHR3
DISC4	(2 <sup>nd</sup> available playlist on the iPod)
DISC5	CHR5

Note: The PA11-CHR does not recognize a playlist that contains no audio tracks regardless of playlist naming. The PA11-CHR does not recognize the "On-The-Go" playlist on your iPod

## 4-7 PLAYBACK CONTROL FUNCTIONS

You can control playback with several functions. These functions are generally cancelled when you press select radio buttons; disconnect the iPod, or POWER OFF the radio or ACC.

### Scan

Press the "SCAN" button, each track in the current playlist will play for 10 seconds. If "SCAN" is pressed at DISC 6, all songs on the iPod will be scanned.

### Random (Shuffle)

Press the "RANDOM" button (RND) on the radio, songs within a playlist will playback in random order. The track number display will change to start from 1 as it does on the iPod. The radio will continue to play this way until "RND" is deactivated.

### Repeat

Repeat of song being played is **NOT** supported.

### Track Up/Down

Press the Track▲ button to advance to the next track in the playlist. Press the Track ▼ button to move to the beginning of the track being played. Press the track ▼ button twice to return to the previous track. If the track ▲ and track ▼ buttons are pressed quickly in repetition, the track numbers display may change unevenly. You may also hear short bits of audio during repeat presses of track up and track down buttons. *There is no limit to the number of songs on a playlist, but the majority of CHRYSLER radios currently displays a maximum of two digits for track number, so after track 99 the display will restart at 1 for example- Track number 100 displays as 01 track 101 displays as 02, track 102 as 03 ...*

### Fast Track Search (x10)

Press the **Fast Forward** or **Fast Reverse**, (◀◀▶▶) the track in the playlist advances or decreases in increment of 10 (i.e. 04, 14, 24...). When you reach the end of the playlist, the search will stop at track 1, and then continue by increments of 10 (i.e. 19, 29, 1, 11). Press and hold the **Fast Forward** or **Fast Reverse** button for more than 4 seconds; the search will jump to the last track or the first track of the playlist. If you are in scan mode, the mode will be cancelled.

**Fast Forward/Fast Reverse Play**

This function applies **only in random mode**. Since engaging or disengaging the random mode does not stop playback of the current song, you must go in or out of random mode to do the fast track search (x10) function, or the fast forward/fast backward play function.

Pressing and holding the **FF** or **RW** button causes the current track to skip through at high speed. During fast forward, when the end of the current track is reached, the iPod will start playing the next random track at normal speed. During fast backward, when the start of the current track is reached, the track will start playing again at normal speed. To continue fast forward or fast reverse play, release the button and press it again.

**CHANGING SOURCE TO AM/FM/CD/CASSETTE**

when a source other than the iPod (i.e. Radio, Cassette etc) is selected on the radio, the iPod will pause.

**VEHICLE COMPATIBILITY LIST**

The PA11-CHR is compatible with the following Chrysler/Dodge/Jeep Model/Year factory radios with a "Mode" or "CD-C" radios.

**The PA11-CHR has been tested and optimized to work on the following:**

<b>Year</b>	<b>Model</b>
1998-04	300M, LHS
1995-04	Concorde
2004-06	Pacifica
2001-05	PT Cruiser
2001-06	Sebring, Cirrus
2001-06	Town & Country, Voyager†
2001-06	Caravan†
2001-03	Durango
1998-04	Intrepid
2000-05	Neon
2001-06	Status
2002-05	Ram
1999-04	G. Cherokee
2002-06	Liberty
2003-06	Wrangler

† Except vehicles with OEM DVD system

## 5. INSTALLATION INSTRUCTIONS

1. Remove the factory radio from the dash
2. Disconnect existing CD Changer from the radio connectors if there is one
3. Plug the CAS-CXi round DIN plug to the PA11-CHR interface box labeled "RADIO"
4. Connect the other end of the CAS-CXi to the factory radio CD Changer connector, (Radios with "Mode" button use the square connector on the CAS-CXi).  
(Radios with "CD-C" button, remove rubber cover with the silver warning tape and plug into radios 8-pin DIN connector.)
5. Connect the audio output of the auxiliary device to AUX input jack on the PA11-CHR if additional AUX option was selected by setting the DIP switch #1 to "OFF"
6. Set Dip switch #2 to "OFF" only if **Direct Mode** is preferred.
7. Plug CB-PA14 cable to PA11-CHR adapter box labeled "iPod"
8. Reinstall Radio

### **WARNING!!**

Use only the iPod connection cable (part no. CB-PA14) included with the PA11-CHR interface. iPod connection cables from other sources may look similar, but using them may damage your iPod.

Revised October 9, 2009

iPod™ iPod™ Mini and iTunes™ are trademarks of Apple Computers Inc. registered in the USA and other countries.  
Chrysler is a registered trade mark of Daimler Chrysler Corporation.  
Design and specifications are subject to change without notice.

© 1995-05 Discount Car Stereo, Inc. All rights reserved. Information in this document is subject to change without notice.  
Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.

## Design Change Notice for USA Spec PA11-CHR

In order to improve the handling of Audiobook and to support streaming music downloads on iPhone or iTouch, **the Hybrid Mode has been deleted** and design changes are also implemented to Playlist Mode and Direct Mode.

Playing iPod with revised Playlist Mode and Direct Mode as follow:

**In case of configuration A:** (in Playlist Mode with RCA AUX OFF or Disabled)

1. When iPod is connected to interface MODE or CD button on radio is pressed:
  - a. iPod will begin play at DISC #5
  - b. iPod screen will show "OK to Disconnect" or "Accessory is attached"
  - c. iPod will continue to play tracks in **the Folder** which was played prior to connecting the iPod to the interface.
  - d. As soon as the last track of **the Folder** is played, iPod will go to the first track in **All songs folder**.
2. When returning to DISC #5 from a Playlist (i.e. any DISC among DISC #1 to DISC #4), DISC #5 will continue play the track where it was left but points to **All Songs Folder** regardless which Folder or Playlist was played at DISC #5 previously.
3. **When DIRECT control from iPod is desired, select DISC #6 on radio. iPod's screen and click wheel will be unlocked. Switch folder or playlist as you would in portable use of iPod.**
  - **Application Tip:** Use DISC #6, iPod Direct to listen the stream music downloads from iPhone or iTouch (Wi-Fi)
  - Song title display on radio is **not supported**.
  - When return to DISC #5 (All songs) from DISC #6 (iPod Direct), DISC #5 will continue play the track and folder of iPod being played' at DISC #6 until the last track of **the Folder** is completed.
4. If iPod has more than 4 Playlists created with iTunes, please refer to Playlist Naming section of interface manual.
5. Use DISC up and DISC down knob on radio to change disc or playlist.

**In case of configuration B:** (in Playlist Mode with RCA AUX ON or Enabled)

1. When iPod is connected to interface and MODE or CD button on radio is pressed:
  - a. iPod will begin play at DISC #4
  - b. iPod screen will show "OK to Disconnect" or "Accessory is attached"
  - c. iPod will continue to play songs in **the Folder** which was played prior to iPod being connected to interface adaptor
  - d. As soon as the last track of **the Folder** is played, iPod will go to the first track in All Songs folder.
2. When return to DISC #4 from a Playlist (i.e. any Disc among DISC #1 to DISC #4), DISC #4 will continue play the track where it was left but points to All Songs folder regardless which Folder or Playlist was played at DISC #4 previously.
- 3 **When DIRECT control from iPod is desired, select DISC #5 on radio. iPod's screen and click wheel will be unlocked and switch song or playlist as you would in portable use of iPod.**
  - **Application Tip:** Use DISC #5 iPod Direct to listen the stream music downloads from iPhone or iTouch (Wi-Fi).

Continue next page

- Song title display on radio is not supported in iPod Direct.
- When return to DISC #4 (All Songs) from DISC #5 (iPod Direct), DISC #5 will continue play the track and folder of iPod being played at DISC #6 until the last track of title folder is completed.

6. If iPod has more than 3 Playlists created in iTunes, please refer to the **Playlist Naming** section of interface manual.

7. DISC #6 is for the RCA AUX.

8. Use DISC up or DISC down knob on radio to change disc or playlist.

**Summary of Playlist Mode Operation;**

<b>In the case of A:</b>	
DIP switch #1 =ON	
DIP switch #2 =ON	
<i>At....</i>	<i>Radio Plays</i>
Disc 1	Playlist # 1
Disc 2	Playlist # 2
Disc 3	Playlist # 3
Disc 4	Playlist # 4
Disc 5	All Songs
Disc 6	iPod Direct

<b>In the case of B:</b>	
DIP switch #1 =OFF	
DIP switch #2 =ON	
<i>At....</i>	<i>Radio Plays</i>
Disc 1	Playlist # 1
Disc 2	Playlist # 2
Disc 3	Playlist # 3
Disc 4	All Songs
Disc 5	iPod Direct
Disc 6	RCA AUX

PA11-CHR

iPod, iPhone, iPod touch and iTunes are registered trade mark of Apple Computer Inc.

Revised on: October 9, 2009