

USASPEC PA11-HOND2 iPod™ ADAPTER

FOR HONDA

Comparison Chart

Music Link vs. PA11-HON2

Music Link	PA11-HON2
Only works in Playlist Mode— A large check mark appears on the iPod screen and control of the iPod is possible using the radio buttons	Works in both Playlist mode— HONDA OK TO DISCONNECT, appears on the iPod screen, or switch it to Direct Mode—iPod screen returns to normal and controlling the iPod is possible using the iPod click wheel
You cannot operate the iPod using its controls (click Wheel, etc). It can only be operated using your Vehicle's audio system controls.	In Direct Mode, use the click wheel—all functions using the iPod buttons are retained, plus Track Up/Down, FF/REW from the radio buttons or steering wheel audio controls
Your vehicle charges the iPod battery when the Ignition switch is in the ON (II) or ACC (I) position. It does not charge the iPod when the ignition switch is In the LOCK (0) position.	Your vehicle charges the iPod battery when the ignition switch is in the ON (II) or ACC (I) position. And will continue charging for up to one hour after the iPod is paused to prevent car battery drain.
Music Link uses the auxiliary audio and CD changer commands on your audio system to control iPod functions. Each disc number (1–6) corresponds with a play mode/category in Music Link.	The PA11-HON2 in PLAYLIST MODE uses the CD changer commands on your audio system to control iPod functions. Each disc number (1–6) corresponds with a playlist on your iPod.
The steering wheel audio controls (if equipped) may not operate or may have limited operation when using Music Link.	The steering wheel audio controls (if equipped) will allow track up/down, FF, REW when using PA11-HOND2
It is not necessary to eject any CDs in the CD player/changer or disconnect an accessory from the auxiliary jack to use Music Link. Press the CD/AUX (or XM/AUX) button to toggle between the CD player/changer, auxiliary jack, and Music Link.	It is not necessary to eject any CDs in the CD player/changer or disconnect an accessory from the auxiliary jack to use PA11-HON2. Press the CD/AUX (or XM/AUX) button to toggle between the CD player/changer, auxiliary jack, and PA11-HON2
Does not recognize empty playlists.	Do not recognize empty playlists (in Playlist mode)
Does not have an additional audio connection	AUX audio input for DVD, SAT radio, Walkman, MP3 Player etc—you can connect the iPod + another audio device for crystal clear audio on the Honda radio.
Display or artist name, song name is not supported	Display or artist name, song name is not supported
Compatible with 4 th generation or later iPod, iPod mini, iPod U2, Special Edition, or iPod nano®. Music Link cannot be used with iPod shuffle or G1 and G2 (10G/15G) iPods	Compatible with 3rd generation or later iPod, iPod mini, iPod U2 Special Edition, iPod nano, iPod Video PA11-HOND2 cannot be used with iPod shuffle or G1 and G2 (10G/15G) iPods

Revised 1/26/06

iPod™ iPod™ Mini and iTunes™ are trademarks of Apple Computers Inc. registered in the USA and other countries.
Honda is a registered trade mark of Honda Co., Ltd. Design and specifications are subject to change without notice.

© 1995-06 Discount Car Stereo, Inc. All rights reserved. Information in this document is subject to change without notice.
Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.