

# Design Change Notice for USA Spec PA11 –VOL

In order to improve the handling of Audiobook and to support streaming music downloads on iPhone or iTouch, **the Hybrid Mode has been deleted** and design changes are also implemented to Playlist Mode and Direct Mode.

Playing iPod with revised Playlist Mode and Direct Mode as follow:

**In case of configuration A:** (in Playlist Mode with RCA AUX OFF or Disabled)

1. When iPod is connected to interface and CD CHANGER SOURCE on radio is selected:
  - a. iPod will begin play at DISC #5
  - b. iPod screen will show "OK to Disconnect" or "Accessory is attached"
  - c. iPod will continue to play tracks in **the Folder** which was played prior to connecting the iPod to the interface.
  - d. As soon as the last track of **the Folder** is played, iPod will go to the first track in **All songs folder**.
2. When returning to DISC #5 from a Playlist (i.e. any DISC among DISC #1 to DISC #4), DISC #5 will continue play the track where it was left but points to **All Songs Folder** regardless which Folder or Playlist was played at DISC #5 previously.
3. **When DIRECT control from iPod is desired, select DISC #6 on radio. iPod's screen and click wheel will be unlocked. Switch folder or playlist as you would in portable use of iPod.**
  - ***Application Tip:** Use DISC #6, iPod Direct to listen the stream music downloads from iPhone or iTouch (Wi-Fi)*
  - *Song title display on radio is **not supported**.*
  - *When return to DISC #5 (All songs) from DISC #6 (iPod Direct), DISC #5 will continue play the track and folder of iPod being played' at DISC #6 until the last track of **the Folder** is completed.*
4. If iPod has more than 4 Playlists created with iTunes, please refer to Playlist Naming section of interface manual.
5. Use DISC up and DISC down knob on radio to change disc or playlist.

**In case of configuration B:** (in Playlist Mode with RCA AUX ON or Enabled)

1. When iPod is connected to interface and CD CHANGER SOURCE on radio is selected:
  - a. iPod will begin play at DISC #4
  - b. iPod screen will show "OK to Disconnect" or "Accessory is attached"
  - c. iPod will continue to play songs in **the Folder** which was played prior to iPod being connected to interface adaptor
  - d. As soon as the last track of **the Folder** is played, iPod will go to the first track in All Songs folder.
2. When return to DISC #4 from a Playlist (i.e. any Disc among DISC #1 to DISC #4), DISC #4 will continue play the track where it was left but points to All Songs folder regardless which Folder or Playlist was played at DISC #4 previously.
- 3 **When DIRECT control from iPod is desired, select DISC #5 on radio. iPod's screen and click wheel will be unlocked and switch song or playlist as you would in portable use of iPod.**
  - ***Application Tip:** Use DISC #5 iPod Direct to listen the stream music downloads from iPhone or iTouch (Wi-Fi).*

Continue next page

- Song title display on radio is not supported in iPod Direct.
  - When return to DISC #4 (All Songs) from DISC #5 (iPod Direct), DISC #5 will continue play the track and folder of iPod being played at DISC #6 until the last track of title folder is completed.
6. If iPod has more than 3 Playlists created in iTunes, please refer to the **Playlist Naming** section of interface manual.
7. DISC #6 is for the RCA AUX.
8. Use DISC up or DISC down knob on radio to change disc or playlist.

#### Summary of Playlist Mode Operation;

In the case of A: DIP switch #1 = ON DIP switch #2 = ON	
<i>At....</i>	<i>Radio Plays</i>
Disc 1	Playlist # 1
Disc 2	Playlist # 2
Disc 3	Playlist # 3
Disc 4	Playlist # 4
Disc 5	All Songs
Disc 6	iPod Direct

In the case of B: DIP switch #1 = OFF DIP switch #2 = ON	
<i>At....</i>	<i>Radio Plays</i>
Disc 1	Playlist # 1
Disc 2	Playlist # 2
Disc 3	Playlist # 3
Disc 4	All Songs
Disc 5	iPod Direct
Disc 6	RCA AUX

PA11-VOL

iPod, iPhone, iTouch and iTunes are registered trade mark of Apple Computer Inc.

Revised on: June 7, 2009