 


Peripheral PXA07 to Sony Aux lite Radio Compatibility Chart

If you're looking for a way to play a portable device, video system, or anything else through your Sony system, we make it extremely simple. In models with Aux Lite, the UniLink™ audio input can be used as an auxiliary input instead of a CD changer input, allowing any audio signal to play through the head unit, and the entire audio system.

Related Products:

MEX-BT5000	CDX-GT805DX	CDX-GT705DX
CDX-HS70MW	CDX-F605X	CDX-F50M
CDX-R505X	CDX-RA700	CDX-GT500
MEX-1GP	CDX-M7810	CDX-F7715X
CDX-F7710	CDX-M8815X	CDX-R5715X
CDX-M8810	CDX-F5710	CDX-M7815X
CDX-F7705X	CDX-M8805X	CDX-F5705X
CDX-M8800	CDX-F7700	CDX-F7005X
CDX-F7000	CDX-F5700	CDX-M850MP
CDX-M3DI	CDX-M800	CDX-M630
MEX-5DI	CDX-CA900X	

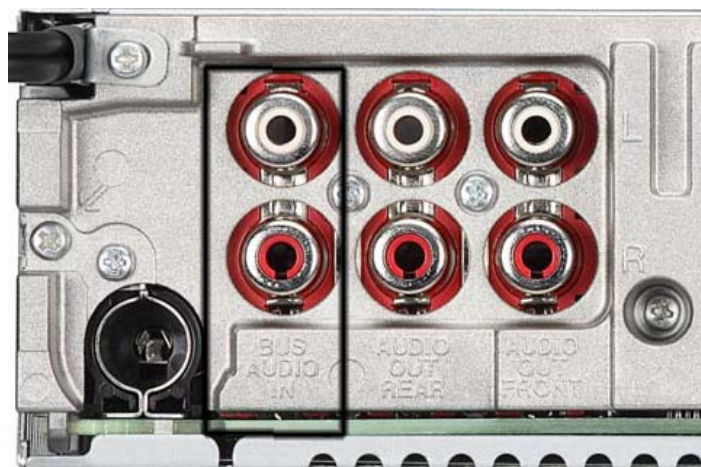

BUS AUDIO INPUT ON Sony Aux Lite Ready Radio

INSTRUCTIONS

You can connect optional portable devices to the BUS AUDIO IN/AUX IN terminal on the unit. If the changer or other device is NOT connected to the terminal, the unit allows you to listen to the portable device on our car speakers.

Note:

When connecting a portable device, be sure BUS CONTROL IN is not connected. If a device is connected to BUS CONTROL IN, "AUX" cannot be selected with the "SOURCE" button.

Tip

When connecting both a portable device and a CD changer, use the optional "AUX-IN selector (i.e. Sony XA-300, PIE SON-AUX)

Selecting auxiliary equipment

1. Press "SOURCE" repeatedly until "AUX" appears
- Operate and control the portable device using its buttons or remote control.

Adjust the volume level

Be sure to adjust the volume level for each connected audio device before playback

1. Turn down the volume on the unit
2. Press "SOURCE" repeatedly until "AUX" appears
3. Start playback of the portable audio device at a moderate volume
4. Set your usual listening volume on the unit
5. Adjust the volume level, following "Adjusting menu items-MENU" The input level is adjustable from -6dB to +6dB.

Revised: December 2, 2006