

VW VW02/PC-POD OWNER'S MANUAL

NAMING OF PLAYLIST(S)

Once your iPod™ is connected to the interface, the radio will see all the playlist(s) as CD's. The VW radio will allow a maximum of 6 CDs/playlist (i.e. presets 1 - 6). Therefore, you will need to name your playlist(s) using the letters "CD" and the number corresponding to that preset. The following is an example of correct playlist(s) naming:

Preset #'s	Playlist(s) names
Preset1	CD1_ _ _ _ ...
Preset2	CD2_ _ _ _ ...
Preset3	CD3_ _ _ _ ...
Preset4	CD4_ _ _ _ ...
Preset5	CD5_ _ _ _ ...
Preset6	CD6_ _ _ _ ...

The name of the playlist must be exactly as shown, **CD** must be in **capital letters**, no spaces between letters and the corresponding number for that preset must be present. The following is an incorrect way of naming a playlist:

Preset1	C_D1_ _ _ _ ...
Preset2	CD_ _ _ _
Preset3	C_D1hip-hop

However, you may add any text after the correct name has been assigned. The following is an example of correct playlist naming with additional text:

Preset1	CD1 Love
Preset2	CD2 Rock
Preset3	CD3 Reggae
Preset4	CD4 Jazz
Preset5	CD5 Salsa
Etc	

PLAYBACK FUNCTIONS

Track Up and Down

The radio has "<SEEK>" buttons which will allow you to track up (SEEK▶) and track down (◀SEEK) through each track on the current playlist.

Fast Track Mode

Pressing the "SCAN" button twice (scan on, scan off) will change the "<SEEK>" functions. In this mode, the "<SEEK>" buttons will track up and down in increments of 10. Pressing the "SCAN" button twice (scan on, scan off) will turn off the "Fast Track" mode.

Fast Forward and Fast Rewind

The "<SEEK>" buttons, when pressed and held, will fast forward and fast rewind through the track currently playing.

Note: Performing a fast forward or fast rewind command will cancel "fast track" mode.

SCAN (also used for BANK-VIEW and FAST TRACK modes)

Press the "SCAN" button once and the radio will play 10 seconds of each song in the entire playlist. The radio will continue to play this way until "SCAN" is deactivated (press "SCAN" once).

MIX (Random Play)

Pressing the "MIX" button of the radio will engage the iPod™ into random play mode. While in this mode, the radio will randomly play songs from the entire playlist. The track number will change to 1 just like it does on the iPod™ and iPod™ mini. The radio will continue to play this way until "MIX" is deactivated.

READING THE RADIO'S DISPLAY

Your radio's track number display is only 2 characters long. If a playlist has more than 99 tracks, track numbers roll over. However, you may still keep track of what track number the iPod™ is playing using PIE's special feature called "Bank View" mode.

 
NOTE: The 99th and 100th song of every "BANK" will be displayed as "TR99". While playing "TR99", press the track up button and track 100 will play (display stays on "TR99").

Bank View Mode


Pressing the "SCAN" button 3 times (scan on, scan off, scan on), the radio's track number display will show you which "BANK" you are currently playing. The "MIX" function must be turned off it is on. "BANK" numbers are designated as follows:

"TR01"	= BANK 1	songs 1 - 100
"TR02"	= BANK 2	songs 101 - 200
"TR03"	= BANK 3	songs 201 - 300
"TR04"	= BANK 4	songs 301 - 400
Etc.	Etc.	Etc.

Radio's display while in normal mode:



 Radio's display while in "BANK VIEW" mode:



Revised 4/4/05

© 1995-05 Discount Car Stereo, Inc. All rights reserved. Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.

iPod™ iPod™ Mini are trademarks of Apple Computers Inc. registered in the USA and other countries.