



AUX-TOY3

Quick Start Installation Guide for Toyota, Lexus and Scion with External Device

Created: January 19, 2015 Revised January 2, 2018

Introduction:

Many Toyota, Lexus and Scion owners may have optional SiriusXM and/or External CD Changers but no aux input. Adding an aux jack to most cars usually requires disconnecting the factory SiriusXM OR external CD Changer**; however the AUX-TOY3 requires and retains these options and provides a 3.5mm Audio jack which can be used to connect and play all kinds of audio devices including Smartphones, MP3 Players, iPod etc. See Frequently Asked question at the end of this guide for more details.

Installation: (At the Radio)

- 1. Remove Toyota Radio from dashboard to gain access to the connectors. (Vehicle specific radio removal instruction are not part of this guide, but may be available upon request)
- 2. Once radio has been removed, disconnect factory 12-way plug from the Radio connector (See Fig. 1 & 2)



Fig. 1 12-way Plug

 


Fig. 2 Radio12-way connector

3. Connect factory 12-way plug removed in step 2 to 12-way connector on adapter harness

- 4. Connect 12-way plug (See. **Fig. 1**) from adapter harness to 12-way connector on the Radio vacated in step 2
- 5. Carefully route audio jack (See **Fig. 3**) to a location on the dash or nearby panel where it will be mounted (within 4 ft.) This location will vary based on vehicle and customer's preference.



Fig. 3Audio Jack

6. Drill a ¼" hole in dash or panel, push aux jack threated end through the hole and tighten nut (See **Fig. 4**)



Fig. 4

Warning! Should you decide to mount the jack, make sure the panel is no thicker than 1/8" otherwise the jack threads won't protrude enough to engage nut. (If necessary use a dremel or sander to thin panel). Mounting the jack is not necessary but doing so makes for a stock appearance and easier to connect and disconnect your audio device

Test Operation:

- 1. Turn Radio "ON"
- 2. Connect audio device to 3.5mm jack using the included Audio cable (See **Fig. 6**).



Fig. 6 audio cable

- 3. Play test track on audio device.
- 4. Press "XM", "AM-SAT", "CD", "CDC" or "DISC" button
- 5. Music from Audio device will play on car speakers
- 6. Use radio volume control button to set playback level.

Warning! Playlist and Track selection is *NOT* possible from the Toyota radio. You must use the audio devices built-in controls to access audio files.

- To listen to SiriusXM or Remote (external) CD Changer, simply disconnect 3.5mm audio cable from jack and operate SiriusXM/ CD Changer as customary
- 8. If correct operation is confirmed go ahead and reinstall Radio

Frequent asked questions

etc.)

- Will the AUX-TOY3 work in vehicles with a 6-CD Changer radio? (the changer built-into radio)
 YES; BUT an External (remote) CD Changer or SiriusXM is also required otherwise the AUX-TOY3 will not work. Vehicles without
 SiriusXM or external Changer may purchase our PXDXTY3, PXAUX
- Will the AUX-TOY3 work in 2009-Up Toyota with XM built-into radio? ("XM" logo on radio face)
 NO; the XM Tuner must be outside the radio; however the adapter will

work if these radios are connected to an external CD Changer.

- I do not have an external CD Changer and XM subscription has
 expired, will this adapter still work?
 YES; as long as SiriusXM Tuner is present the AUX-TOY3 will work.
 Works with or without SiriusXM Subscription.
- 4. I'm not the original owner and don't know if the vehicle has SiriusXM. How can I find out without ripping the car apart?

 Turn Radio "ON" and press the "AM-SAT", "SAT" button. The screen should change to display channel number, preview channel etc. If radio does not respond to pressing these button the car does not have an active SiriusXM Tuner.

Call 804-717-5717 or email support@discountcarstereo.com

© 1995-18 Discount Car Stereo, Inc. All rights reserved. Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.

^{**} External or remote CD Changer refers to the optional Changer installed on the lower dash, center armrest, hatch, trunk etc. (external CD Changer is not the changer built-into the head unit)