

## Blaupunkt External AUDIO SOURCE SELECTION

### External audio sources


You can connect up to two external audio sources to the device. Audio sources can, for example, be portable CD players, MiniDisc players or MP3 players.

You can connect the first external audio source (AUX1) **instead** of a CD changer.

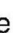 

You can connect the second external audio source (AUX2) **in addition** to the CD changer or AUX1.

In order to be able to use the AUX inputs, you must activate them in the set-up menu.

If you want to connect an external audio source, you will need an adapter cable.

- ⇒ Press the softkey  assigned to the “AUX2” display item. By pressing the “AUX2” softkey you can switch between the “AUXILIARY 2 ON” and “AUXILIARY 2 OFF” settings.

#### Note:


- If a CD changer is connected, you cannot change the “AUX1” input.
- ⇒ Press the joystick **OK**  or the **MENU** button  to close the menu.

The settings are saved.


#### Note:

- If the AUX inputs are activated, you can select them by pressing the **SOURCE** button

### Switching the AUX input on/off

- ⇒ Press the **MENU** button
- ⇒ Press the softkey  assigned to the “AUX” display item.

The AUX menu is displayed.

- ⇒ Press the softkey  assigned to the “AUX1” display item if no CD changer is connected and you want to connect an external audio source.

By pressing the “AUX1” softkey you can switch between the “AUXILIARY 1 ON” and “AUXILIARY 1 OFF” settings.

