

BLAUPUNKT EXTERNAL AUDIO SOURCE SELECTION

External audio sources

In place of the CD changer it is also possible to connect other external audio sources to the line output. These sources can include a portable CD player, MiniDisc player or MP3 player.

The AUX output has to be switched on in the install menu.

To connect up an external audio source, you will need an adapter cable, obtainable from any authorised Blaupunkt dealer.

Switching the AUX input on/off

- ⇒ Press the **MENU** button
- “MENU” appears on the display.
- ⇒ Press the **∨** or **∧** button repeatedly until “AUX-IN-1 OFF” or “AUX-IN-1 ON” appears on the display.
- ⇒ Press the **<** or **>** button to switch AUX on or off.
- ⇒ Press the **MENU** button or **OK** once you have completed the setting.

Note:

When the AUX input is switched on, it can be selected using the **CD•C** button

TECHNICAL DATA

Input sensitivity:

- AUX 1 input : 2 V / 6 kΩ
- Tel-/Navi input : 10 V / 1 kΩ

