

External audio sources

Instead of connecting a CD changer, you can connect another audio source equipped with a line output. The audio source, for example, can be a portable CD player, MiniDisc player or MP3 player.

The AUX input must be activated in the menu.

If you want to connect an external audio source, you will need an adapter cable. You can obtain this adapter cable (BP no.: 7 607 897 093) from your authorised Blaupunkt dealer.

Switching the AUX input on/off

⇨ Press the **MENU** button (8).

“MENU” appears in the display.

⇨ Keep pressing the **V** or **^** button (10) until “AUX-IN-1 OFF” or “AUX-IN-1 ON” appears in the display.

⇨ Press the **<** or **>** button (10) to switch AUX on/off.

When you have finished making your changes,

⇨ press the **MENU** button (8) or **OK** (11).

Note:

- If the AUX input is switched on it can be selected by pressing the **CD•C** button (16).

Specifications

Amplifier

Output power: 4 x 25 watts sine in accordance with DIN 45 324 at 14.4 V
4 x 50 watts max. power

Tuner

Frequency ranges US:

FM: 87.5 – 107.9 MHz

AM: 530 – 1710 kHz

Frequency ranges Asia and Europe:

FM: 87.5 – 108 MHz

AM: 531 – 1602 kHz

Frequency ranges Thailand:

FM: 87.5 – 108 MHz

AM: 531 – 1629 kHz

FM mono sensitivity:

17 dbf

FM frequency response:

35 - 16,000 Hz

Cassette

Frequency response:

30 - 18,000 Hz

Pre-amp out

4 channels: 3 V

Input sensitivity

AUX input: 2 V / 6 kΩ

Tel./Navi input: 10 V / 1 kΩ

Subject to changes!