



## CHRY-AUX

### QUICK START INSTALLATION GUIDE FOR SELECT 1995-02 CHYSLER CD CHANGER READY RADIOS

created August 10, 2015  
Revised: February 9, 2025

## PRODUCT SAFETY & DISCLAIMER

READ ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLING. FAILURE TO DO SO MAY CAUSE PERSONAL INJURY OR DAMAGE TO PRODUCT AND/OR PROPERTY

- This installation guide is provided as a GENERAL installation guide, some vehicles vary and may require additional steps. We do not accept responsibility for third party labor charges or modifications. Exercise due-diligence when installing this product.
- We do not accept any responsibility for vehicle damage or personal injury resulting from the installation of this product.
- Careless installation and operation can result in equipment damage.

## Requirements:

CD CHANGER CONTROLLING RADIO

## Introduction

Any car owner adamant about keeping the factory radio and maintaining vehicles original look and feel will be pleased to find this adapter. The CHRY-AUX updates the vehicle owner to connect and play modern media audio devices such as MP3 players, Smartphones etc. without changing the radio. The CHRY-AUX auxiliary input adapter connects to the radios 8-pin CD changer port which guarantees to best possible sound. **Factory CD changer (if present) must be disconnected.** See **Frequently Asked question** at the end of this guide for details.

## Installation

Radio removal required to gain access to connectors.

Vehicle specific radio removal is not part of this guide; however, these can be made available upon request.

1. Connect adapter 8-pin plug (See **Fig. 1**) to "CD" changer connector on radio (See **Fig. 2**)



**Fig. 1**  
8-pin plug



**Fig. 2**  
Radio connector

2. Connect one end of supplied 3.5mm audio cable (See **Fig. 3**) to input jack on adapter (See **Fig. 4**), route cable end to front of the dash or wherever audio device will reside (within 3 ft.)

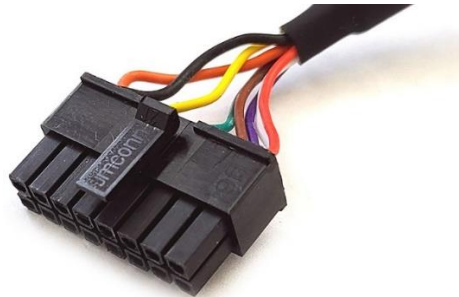


**Fig. 3**  
3 ft. Aux cable



**Fig. 4**  
3.5mm jack

3. Connect installation harness 16-pin plug (See **Fig. 5**) to module 16-pin connector (See **Fig. 6**)



**Fig. 5**



**Fig. 6**

## Optional USB extension cable installation

**Notes:** 1. Optional 6 ft. USB dash mount extension cable is not required for operation; however, it extends USB charging port (See **Fig. 9**) to dashboard, glovebox etc.

2. The USB port supports software updates and charging only

1. Drill a  $\frac{3}{4}$ " hole to dash or panel using a step drill bit or equivalent (See **Fig. 10**)  
As an alternative; use the included bracket (See **Fig. 14a**) to mount USB without drilling.



**Fig. 7**

2. Fish USB cable terminal (See **Fig. 11**) through hole created in step 1 and plug into USB port on module (See **Fig. 8**)



**Fig. 8**  
USB cable



Fig. 9

3. Snap header (See Fig. 10) to surface until flush (See Fig.11)



Fig. 10



Fig. 11



Fig. 12

Tuck and secure any extra wires from moving parts and proceed to next step

## Operation

1. Turn ignition to "ACC" and radio "ON"
2. Press radio "MODE" button. Radio display changes to Disc1 Track 1 as seen in Fig. 5



Fig. 5

3. Use radio volume control button to set playback level.

**Warning:** Playlist and Track selection is \*NOT\* possible from Chrysler radio buttons. Use audio device built-in controls or wireless remote to access and control audio files and applications.

4. If correct operation is confirmed go ahead and reinstall Radio.

---

## Frequent ask questions & troubleshooting

---

1. **Will the CHRY-AUX work on all Chrysler 8-pin CD changer port radios?**  
**NO;** this adapter works on 2 Chrysler changer controlling radios:  
1. **Square face Tape radio:** With **Mode** button, 5 band EQ, "Disk Up" on preset # 1, "Disc down" on preset #5, [8-pin](#) CD changer port as seen [here](#)  
2. **"Square face Tape radio:** With **MODE/EJECT** button, 6 radio presents, Bass and Treble slider controls, "DIRECT DISC SELECT 1-6" printed above radio presets as seen [here](#)  
Also works on European radio model PD47D4345.
2. **My radio has most requirements listed in question 1. Will the CHRY-AUX still work?**  
**Probable NOT;** The compatible radio must meet [all requirements \(buttons\)](#) listed in question 1 in order to be compatible
3. **Will I have to disconnect the factory CD changer?**  
**YES,** this adapter uses the CD changer 8-pin port. Any and all devices using this port will need to be disconnected. Purchase our [BTA-CHRY](#) to retain CD changer.
4. **Can I use the radio to control songs and display text?**  
The radio is not text capable and the adapter does support TRRS – meaning if your audio device supports TRRS, the radio SEEK buttons can be used to track up/down.  
Notes: TRRS is only possible using a 4-pin audio cable or as see in Fig. 3.  
Not all devices support TRRS.

### Disclaimer

- This product has no affiliation with Chrysler
- We're not liable for misuse of this product.
- We recommend professional installation

email [support@discountcarstereo.com](mailto:support@discountcarstereo.com)

© 1995-Feb-25 Discount Car Stereo, Inc. All rights reserved. Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.