



CHRY02-AUX

INSTALLATION GUIDE FOR 2002-07 CHRYSLER CD CHANGER READY RADIOS

created August 10, 2015

Revised: December 20, 2024

PRODUCT SAFETY & DISCLAIMER

READ ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLING, FAILURE TO DO SO MAY CAUSE PERSONAL INJURY OR DAMAGE TO PRODUCT AND/OR PROPERTY

- This installation guide is provided as a GENERAL installation guide, some vehicles vary and may require additional steps. We do not accept responsibility for third party labor charges or modifications. Exercise due-diligence when installing this product.
- We do not accept any responsibility for vehicle damage or personal injury resulting from the installation of this product.
- Careless installation and operation can result in equipment damage.
- Careless installation and operation can result in equipment damage.

Requirements:

RADIO WITH CD CHANGER CONTROLS- MODE BUTTON

Introduction:

Many older vehicle owners' adamant about keeping the factory radio will be pleased to know that adding this adapter makes it possible to connect and play may potable audio devices without sacrificing the original radio. The CHRY02-AUX auxiliary input adapter connects to the radio 10-pin CD changer/Sat radio port which guarantees to best possible sound. **Factory CD changer or Sirius radio (if present), must be disconnected and will no longer play.**

Compatible Chrysler radios must have a **MODE + DISC ^ on preset 1** and **DISC v on preset 5** (See Fig. 6) and 10-pin port (See Fig.2). Please ensure your radio meets all requirements prior to ordering.

See Frequently Asked question at the end of this guide for details.

Installation:

Radio removal required to gain access to connectors.

Vehicle specific radio removal is not part of this guide; but may be available upon request. With radio out;

1. If present, disconnect any factory option connected to radio 10-pin port

2. Connect 10-pin gray plug (See Fig. 1) from adapter harness to 10-pin radio socket (See Fig. 2)



Fig. 1
10-pin plug

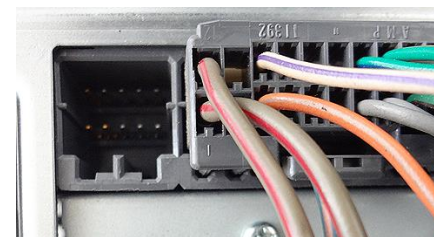


Fig. 2
Radio socket

3. Connect one end of your 3.5mm audio cable (See Fig. 3) or similar to the adapter input jack (See Fig. 4).
4. Route audio cable plug to dashboard or wherever audio device will reside.



Fig. 3
Audio cable (not included)



Fig. 4
3.5mm jack

5. Secure adapter and proceed to next step.

Operation:

1. Turn ignition and radio "ON"
2. Press radio "MODE" button until "CD" display mode (See Fig. 5)



Fig 5
Rounded face radio with Mode button

3. Turn radio volume control button to set playback level.
4. If correct operation is confirmed go ahead and reinstall radio.

Frequent ask questions & troubleshooting

1. Does the CHRY02-AUX work on all Chrysler 10-pin radios?
NO; Works on CD changer controlling radios with the following buttons:
MODE + DISC ^ on preset 1 and DISC v on preset 5 (See Fig. 6) and 10-pin CD socket on the back (See Fig. 2)
 Radios with "MODE" button only are **NOT** compatible.



Fig. 6

2. My radio has a CD-C button. Will the CHRY02-AUX work?
 Radios with **CD-C** button (**Except European "RAD" - part number P56038585AD**) have 8-pin sockets and requires our [CHRY98-AUX](#)
3. I'm hearing feedback noises during playback. What would cause this?
 Ensure audio jack is fully inserted and if audio device is also charging try disconnecting from charger.
4. Will I have to disconnect my Satellite radio or separate CD changer?
YES, this adapter uses the 10-pin radio port. Any factory option already in place will need to be disconnected. See our [AUX-CH3](#)

Disclaimer

- This product has no affiliation with Chrysler
- We're not liable for misuse of this product.
- We recommend professional installation

Email support@discountcarstereo.com

© 1995-Dec-24 Discount Car Stereo, Inc. All rights reserved. Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.