



CHRY98-AUX

QUICK START AUXILIARY INPUT INSTALLATION GUIDE FOR CHRYSLER 1998-01 RADIOS WITH CD-C BUTTON

Created: May 11, 2017
Revised June 12, 2021

PRODUCT SAFETY & DISCLAIMER

READ ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLING, FAILURE TO DO SO MAY CAUSE PERSONAL INJURY OR DAMAGE TO PRODUCT AND/OR PROPERTY

- This installation guide is provided as a GENERAL installation guide, some vehicles vary and may require additional steps. We do not accept responsibility for third party labor charges or modifications. Exercise due-diligence when installing this product.
- We do not accept any responsibility for vehicle damage or personal injury resulting from the installation of this product.
- Careless installation and operation can result in equipment damage.

Introduction:

This simply Auxiliary input adapter allows users to connect and play audio devices with a 3.5mm jack to select 1998-01 Chrysler radios with CD-C button on faceplate. Simply connect adapter to 8-pin CD changer port on the back of the radio and begin enjoying music stored on device or applications from any internet connected smartphone, tablet, laptop etc. The CHRY98-AUX replaces factory CD changer (if present) and works only on radios with **CD-C** button

Installation:

1. Remove radio from dash to gain access to connector.
Vehicle specific radio removal is not part of this guide but may be available upon request.
2. Disconnect any Chrysler accessory connected to radio 8-pin connector (See **Fig. 2**)
3. Connect 8-pin plug (See **Fig. 1**) from adapter to radio "CD" port (See **Fig. 2**)



Fig. 1
8-pin plug



Fig. 2
Radio connector

4. Secure adapter box and proceed to next step.
5. Connect one end of supplied audio cable (See **Fig. 3**) to input jack on adapter (See **Fig. 4**) and route audio plug to dashboard or wherever audio device will reside (within 3 ft.)



Fig. 3
3 ft. Aux cable



Fig. 4
3.5mm jack

Test Operation:

1. Turn ignition and radio "ON"
2. Press radio "CD-C" button (See Fig. 5) until screen changes to CD changer display as seen in Fig. 6



Fig. 5



Fig. 5

Note: If radio does not switch to CD mode; cycle ignition OFF/ON and try again.

3. Put audio device in play mode and adjust radio volume. If distorted, lower the volume on phone or if inaudible, raise volume on phone.

Warning! Use the smartphone built-in controls to access and control the audio files.

4. If correct operation is confirmed go ahead and reinstall the Radio.

Frequently asked questions

1. **Will the CHRY98-AUX work on all Chrysler 8-pin radios?**
NO; Works on all Chrysler radios with a **CD-C** button on faceplate
2. **My radio has a “square face” and Mode button. Will the CHRY98-AUX work?**
NO, 2001+radios with Mode button requires our [CHRY02-AUX](#).
3. **Can I use the CHRY98-AUX to make/receive phone calls?**
NO; The **CHRY98-AUX** is an auxiliary input adapter and as such it does not support hands-free calls, however speakerphone mode allows caller to be heard on car speakers.
4. **Will I have to disconnect the remote CD changer?**
YES, this adapter uses the 8-pin changer port. Any and all devices using this port will need to be disconnected.
5. **Can I use the radio buttons to control songs and display text?**
NO, user must use device built-in control and display just as you would in portable mode.

Disclaimer

- This product has no affiliation with Chrysler
- We're not liable for misuse of this product.
- We recommend professional installation

email support@discountcarstereo.com

© 1995-Jun-21 Discount Car Stereo, Inc. All rights reserved. Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.