



Mercedes-Benz



MBZ-AUX

QUICK START AUX ADAPTER INSTALLATION GUIDE FOR SELECT 1992-98 MERCEDES

Created September 3, 2016
Revised: September 12, 2021

PRODUCT SAFETY & DISCLAIMER

READ ALL INSTRUCTIONS CAREFULLY BEFORE INSTALLING, FAILURE TO DO SO MAY CAUSE PERSONAL INJURY OR DAMAGE TO PRODUCT AND/OR PROPERTY

- This document is provided as a GENERAL installation guide, some vehicles vary and may require additional steps. We do not accept responsibility for third party labor charges or modifications. Exercise due-diligence when installing this product.
- We do not accept any responsibility for vehicle damage or personal injury resulting from the installation of this product.
- Careless installation and operation can result in equipment damage.

Requirements

RADIO WITH CD BUTTON

Introduction

The MBZ-AUX auxiliary input adapter is compatible with virtually any portable audio device with a 3.5mm output (headphone jack) including MP3 Players, Smartphones, iPods, iPads etc. and allows the user to play them through the CD changer port on the car radio in select 1994-98 Mercedes Benz. **The MBZ-AUX replaces the 6-disc CD changer** (if present)—to retain use of the CD changer, purchase our [AUX-MB](#) or [A2D-MBCD](#)

Installation

Radio removal required to gain access to the connectors.

Removal tool (See **Fig. 1**) required to remove factory radio from dashboard.

1. To remove radio, slide both tools (sold separately) into radio slots to detent position, (Straight edge facing out) and withdraw radio by pulling outwards. (See **Fig. 2**)
Click [here](#) to for more specific use of the removal tools.



Fig. 1
Radio removal tool



Above pictured Mercedes radio **does NOT** apply



Fig. 2
Mercedes radio

2. If vehicle is wired for or has a CD changer, disconnect 10-pin plug (See **Fig. 3**) from radio chamber (**C**) (See **Fig. 4**) otherwise go to step 3.



Fig. 3

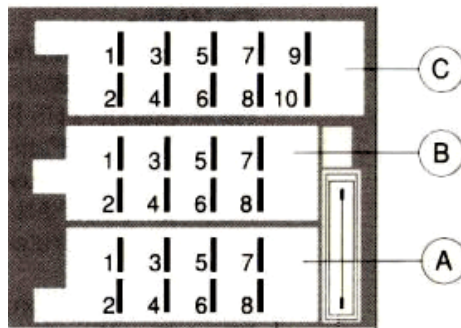


Fig. 4

radio connector

3. Connect adapter harness 10-pin plug (red) to radio chamber (C) vacated in step 2—See Fig. 5



Fig. 5

10-pin plug

4. Connect supplied 3.5mm audio cable (See Fig. 6) to input jack on adapter (See Fig. 7). Route the other end to wherever audio device will reside (within 3 ft.)



Fig. 6

audio cable

Operation

1. Turn ignition and radio "ON"
2. Press "CD" button on radio
 - Note:** If radio does not switch to CD, cycle ignition OFF/ON and retry.
3. Put audio device in play mode. If playback is distorted, lower volume on device or if inaudible, raise it.

Warning: Playlist and Track selection is *NOT* possible from radio. Use the smartphone built-in controls to access and control the audio files.

4. If correct operation is confirmed go ahead and reinstall radio.

Disclaimer

- This product has no affiliation with Mercedes
- There are no warranties expressed or implied by purchase of this product
- We're not liable for misuse of this product.

© 1995-Sep-21 Discount Car Stereo, Inc. All rights reserved. Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.