



PXD VW 1

Auxiliary input Adapter Installation Guide for VW Group Radios Pre-wired for CD Changer

Revised August 22, 2019

Introduction:

Many VW Group Owners are looking for an easy and effective way of connecting and listening to their portable audio devices on the factory radio. Connecting an Auxiliary adapter to most VW Group usually requires disconnecting the factory **External Changer****

or SiriusXM options. The PXDXVW1 works **on the CD Changer port of select 1998-09 VW Group vehicles that are pre-wired for the CD Changer in trunk/hatch, or center dash. CD Changer (if present) must be disconnected**, but with the storage capacity of most portable devices, sacrificing the CD Changer should be an easy decision.

Installation:

1. Locate the 12-way pre-wired CD Changer plug (See **Fig. 1**) in trunk, hatch or center dash area of vehicle (installation is done at the remote cd changer location)
2. If vehicle is equipped with CD changer, disconnect the 12-way plug (See **Fig. 1**)



Fig. 1
Factory Changer Plug

3. Connect the factory 12-way plug to the 12-way connector on the adapter harness (**See Fig. 3**)



Fig. 3
Adapter harness

4. Connect the 22-way Molex plug on Adapter harness (See **Fig. 3**) to the 22-way connector on Main Module (See **Fig. 4**)



Fig. 4
22-way Molex connector

5. Dip switches **1 & 8** must be set "ON" (See **Fig. 5**) or consult user manual included with adapter.



Fig. 5
dip-switches

6. Connect the 8-pin **DIN to RCA** OR 8-pin **DIN to 3.5mm** cable (See Fig. 6) to the Main Module. (See Fig. 7)



Fig. 5
audio cables



Fig. 7
8-pin DIN input

7. Route the 3.5mm plug to the front of the dash or location where audio device will reside (within 6 ft.)

Test Operation:

1. Turn the Radio "ON"
2. Press the "CD" button to enter CD Changer Mode
3. Connect audio device to the 3.5mm plug on gray 6 ft. Audio cable (See Fig. 8) or RCA jacks.



Fig. 8
3.5mm plug

4. Search the device for a song and press play.
5. Use radio volume control button to set the playback level. To reduce distortion, we recommended setting the audio device volume level to 50% or less

Warning! Playlist and Track selection is *NOT* possible from the VW Group radio. You must use the audio devices built-in controls to access audio files.

** External or remote CD Changer refers to the optional Changer installed on the lower dash, center armrest, hatch, trunk etc. (external CD Changer is not the Changer built-into the head unit)

©1995-15 Discount Car Stereo, Inc. All rights reserved. Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.