

Setting the AUX Mode

You can input TV/video sound by connecting an optional "M-Bus V-Link" (M-Bus/RCA interface cable KCM-122B) to this component.

- 1** Press and hold the **F/SETUP** button for at least 3 seconds.
- 2** Press the **I◀◀** or **▶▶I** button to select the AUX mode.
- 3** Press the **BAND** button to toggle the mode between AUX ON and AUX OFF.
- 4** Press the **F/SETUP** button to return to normal mode.
- 5** To adjust the volume, etc., first press the **SOURCE/POWER** button and select the AUX mode, then make the necessary adjustment.

→ TUNER → CD → AUX →

NOTES

- When AUX ON is selected, a CD Changer cannot be used.