



Radio shown for illustration purposes only

BT-BKRTKMki

QUICK REFERENCE GUIDE FOR BECKER RADIOS WITH CD CHANGER

Created December 22, 2016

Revised: June 10, 2020

Introduction:

Most Bluetooth car kits include a universal harness that may or may not fit the radio in your vehicle and as a result splicing and/or cutting the vehicles harness will be required to complete the install. Purchase this installation harness to quickly install Motorola TK30 and select Parrot MKi Hands-free kits to Becker radios with optional CD changer (**vehicle MUST HAVE a working CD changer**).

Installation:



We recommend disconnecting the car battery. But before anything locate and record the radio safe code. Don't disconnect battery if radio code is not available, otherwise radio will cease to operate.

1. Remove radio from dash to gain access to the connectors. A set of Radio removal tools (See **Fig. 1**) is required.



Fig. 1
Radio removal Tools

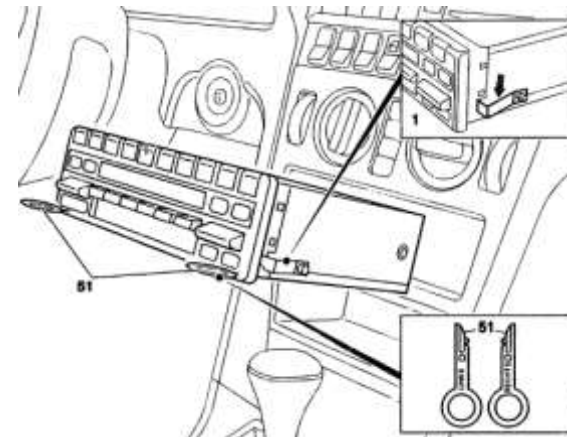


Fig. 2

2. Slide tools into radio slots (**51**) (Straight edge facing away). Withdraw radio by pulling outwards. To release keys simply press retaining springs. See **Fig. 2**. Click [here](#) for more regarding removal tools.
3. Disconnect blue (C-3) green (C-2) plugs and yellow (C-1) plugs from radio cavity (See **Fig. 3**)

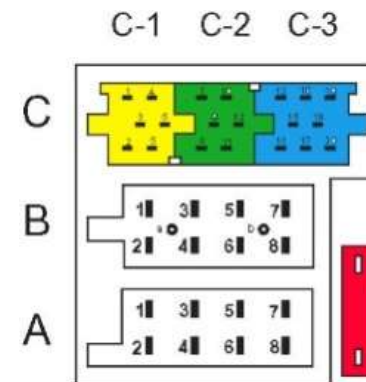


Fig. 3
radio connectors

4. Connect installation harness yellow, green and blue plugs (See **Fig. 4**) to their respective slots on radio. (Chamber C as seen in **Fig. 3**).

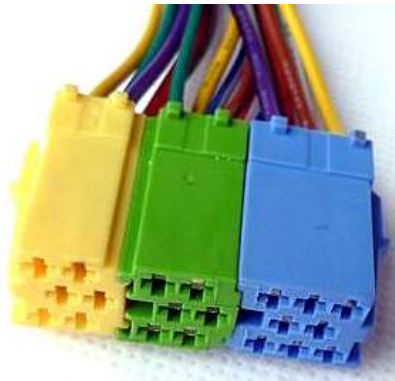


Fig. 4
Audio harness

5. Connect factory harness yellow, green and blue plug to installation harness red plug as seen in **Fig. 5**



Fig. 5

6. Disconnect radio 8-pin plug from chamber **A** (See **Fig. 3**) and connect to installation harness 8-pin connector (See **Fig. 6**)
7. Connect installation harness 8-pin plug (See **Fig. 6**) to radio cavity vacated in step 6 (See **Fig. 3**)



Fig. 6

7. Connect installation harness 22-pin Molex plug (See **Fig. 7**) to Motorola or Parrot hideaway module

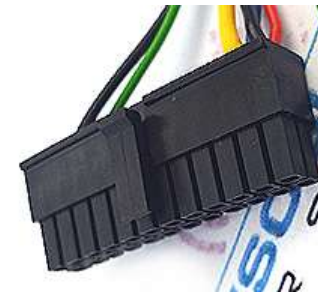


Fig. 7

8. Install microphone (See **Fig. 8**) to visor and route plug down the side pillar, under the dash and toward the radio cavity and connect to "MIC" input on Module (See **Fig. 7**)



Proceed with microphone, module installation according to guide included with kit.

Reminders:

1. The **factory CD Changer is required and remains connected** otherwise this kit will not work as intended.
2. Radio must be in CD mode to for music streaming etc.

Frequent asked questions

1. Why purchase the BT-BKRTKMki?

The **BT-BKRTKMki** harness allows for quick installation of:
Motorola TK30 (will not fit other Motorola kits) and
Parrot MK6000/6100, MKi9000/9100 and MKi9200

2. Why should I purchase this harness instead of using the one included in Bluetooth Kit?

The installation harness included with the aforementioned kits can be used in most application except in vehicles equipped with factory amplifiers.
The **BT-BKRTKMki** can be used in vehicles with or without amplifiers.

3. Why is a CD changer required to install my Hands Free, music streaming kit to the CD-210 and CDR-210 and other?

Becker CR-210 and CDR-210 and others, does not have "AUX IN" port required for music streaming feature to work. This harness uses the CD changer audio port for music streaming. CD changer playback is impaired; however, the CD changer must remain connected.

Disclaimer

- this product has no affiliation with Becker or Apple
- we're not liable for misuse of this product.

Email support@discountcarstereo.com

© 1995-2020-06-10 Discount Car Stereo, Inc. All rights reserved. Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.