

Courtesy of: DiscountCarStereo.com
Serving the internet community since 1995

BECKEL



IP-BKRCD/3.5-BKRCD

IPOD & AUX ADAPTER QUICK START GUIDE FOR BECKER WITH CD CHANGER

Revised: July 20, 2021

Introduction:

These adapters are compatible with any Becker radio and functioning CD changer and particularly great for radios that do not have an AUX menu option including PCMI (BE2580), CR210, CDR210, CR31, CR22, CDR22, CDR21, CR11 etc. **The CD changer remains connected but will no longer play.**

The **iP-BKRCD** adapter allows users to **connect, play and charge** all Apple 30-pin connecting devices.

The **3.5-BKRCD** adapter allows users to **connect and play** any audio device with a 3.5mm Jack. With the storage capacity of most portable devices sacrificing the CD Changer should be an easy decision.

Installation:



Most Becker radios are coded and will not operate without the code. Do not proceed to step 4 if radio code is not available otherwise radio will not operate upon reconnection.

1. Remove radio from dashboard to gain access to the connectors.
2. Removal tools (See **Fig. 1**) required to remove these radios (except PCMI) and are available separately



BRRT



GRRT

Fig. 1
Radio removal tools

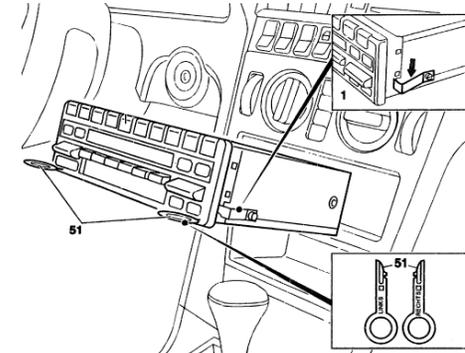


Fig. 2

3. Slide tools into radio slots (**51**) with straight edge facing away. Withdraw radio by pulling outwards. With radio removed, press retaining spring to release keys. See **Fig. 2**.
For detailed radio removal instructions, click [here](#).
4. For aux installation, disconnect BLUE plug from radio **C-3** chamber (See **Fig. 3**) (pinch blue tab to release)
5. For iPod installation disconnect yellow (C-1), green (C-2) and blue (C-3) plugs from radio (See **Fig. 3**)

Alert! Yellow plug present only in vehicles with amplifiers; otherwise **C-1** chamber will be empty.

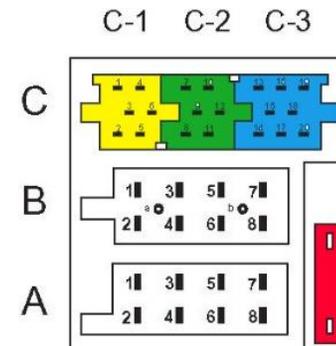


Fig. 3
Radio connectors



Fig. 4
iP-BKRCD



Fig. 5
3.5-BKRCD

6. **IP-BKRCD:**
Connect YELLOW, BLUE, GREEN plugs (See Fig. 4) to C-1, C-2 and C-3 radio chambers vacated in step 5.
7. Connect factory YELLOW, BLUE, GREEN plugs removed in step 5 to 20-pin RED connector (See Fig. 4)
8. **3.5-BKRCD:**
Connect BLUE plug (See Fig. 5) to radio chamber C-1 vacated in step 4.
9. Carefully route 30-pin dock connector OR 3.5mm jack (See Fig. 5) to glove box, center armrest or location where the audio device will reside



Fig.5
30-pin dock/3.5mm jack

Test Operation

1. **iP-BKRCD:** Connect Apple 30-pin device (iPod, iPhone) to dock connector
2. Apple device will begin charging
3. **3.5-BKRCD:** Connect audio device to the 3.5mm plug
4. Turn radio "ON" press "CD" button
5. Select favorite track using audio device built-in controls.



Playlist and Track selection is ***NOT*** possible from the radio. You must use the Audio device built-in controls to access music files.

6. Use radio volume button to set playback level
7. If successful proceed to re-install radio. (Removal Tools not required for installation.)



These adapters require a working CD changer to work as described. Porsche **PCMI (BE258D), CR-210, CDR-210, CR-22 and CDR-22** and other Becker radios **do not have AUX ports and for that reason a CD changer is required.** **Do not purchase this part if vehicle does not have a functioning CD changer which remains connected but will no longer play.**

Disclaimer

- This product has no affiliation with Porsche, Becker or Apple
- We're not liable for misuse of this product.
- We recommend professional installation.

©1995-2021-07-20 Discount Car Stereo. All rights reserved. Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.